

Start/Stop - On/Off

START		STOP	187
ENGINE START		ENGINE STOP	222
BRAKE		ENGINE START	323
WATER ON		WATER OFF	602
BLOWER ON		BLOWER OFF	702
JETTER ON/OFF			723
ON		OFF	810
NOT USED		ENGINE START	882
MACHINE STOP		ENGINE STOP	883
LEVEL STOP START			893
LOAD OUT OFF		LOAD OUT ON	894
VIBRATOR 1 OFF		VIBRATOR 1 ON	895
VIBRATOR 2 OFF		VIBRATOR 2 ON	896
AIR DOOR OFF		AIR DOOR ON	897
		JETTER ON/OFF	993
			996
 Ignition		 Crank	997
Throttle		 Lights	998